Megger Multi-Tek International Email: mti@multitekintl.com

BITE[•]2 and BITE2P Battery Impedance Test Equipment



- Determines condition of lead-acid and NiCd cells up to 7000 Ah
- On-board Pass/Warning/Fail indications
- Robust, repeatable instruments
- On-line testing
- Checks charger condition by measuring ac ripple current
- Includes PowerDB LITE Software

DESCRIPTION

The BITE2 and BITE2P Battery Impedance Test Equipment determine the condition of lead-acid and nickel-cadmium cells up to 7000 Ah. An advanced feature set has been developed that includes Pass/Warning/Fail calculations based on a userentered baseline value, advanced printing functions and more. The case of the BITE2P consists of both the transmitter and a carrying case for all of the standard accessories and some of the optional accessories, in an all-in-one unit. The BITE2 and its accessories fit into a sturdy canvas case with a shoulder strap.

The instruments work by applying a test signal across the battery string while on-line, then calculates impedance based on simultaneous measurements of current and resulting voltage drop of each cell/jar. They also measure dc voltage and interconnection (strap) resistance to help determine the overall condition of the entire battery string's electrical path from terminal plate to terminal plate.

In addition, the BITE2 and BITE2P measure ac ripple current which, if too high and over an extended period of time, can damage the battery by heating it. (An increase of battery temperature by 18°F/10°C will halve the life of lead-acid batteries.) Battery manufacturers generally recommend a limit of 5A of ac ripple current for every 100 Ah of battery capacity. The first measurement that the instruments take is ac ripple current which should be trended.

The BITE2 and BITE2P receiver stores the readings in its internal memory. These measurements, along with other maintenance data such as ambient and pilot cell temperatures and ac ripple current, assist in determining the overall condition of battery systems. Megger recommends that impedance measurements with the BITE2 or BITE2P be made part of a battery maintenance program with readings taken and recorded semiannually for

Unlike load cycle testing that involves substantial downtime and repeated discharges, using the instruments require no battery discharge, nor do they stress the battery in any way

flooded batteries and quarterly for VRLA.

compared to other techniques. With a test time of less than 15 seconds for each cell and intercell connector, one person can easily, quickly, and precisely measure internal cell impedance, dc terminal voltage and intercell connection resistance without taking the battery system off line and evaluate charger condition also.

Naturally, everything you need to perform these tests is included with the basic instruments. There is a full line of optional accessories to enhance the capabilities of the BITE2 and BITE2P. Both have the ability to download to a PC for data interpretation and to PowerDB, Megger's battery database management software. Additionally, the BITE2P has a built-in printer to review the active test and also to leave a hard copy record at the site.

Receiver

The battery-operated receiver incorporates the potential leads, clamp-on current sensor, and data storage capabilities. It stores more than 2000 sets of data (cell impedance, cell voltage and interconnecting strap resistance, date and time stamps) in up to 300 tests. It also allows for printing the active test for easy review and retest. Selective printing of any test and deleting oldest tests are now included features to maintain in memory the most critical tests.

At any time while performing a test, the operator can review the current test results by using arrow keys and scrolling back through the active test screen. The operator can also print the active test using the BITE2P transmitter printer. If needed, the operator can retest any of the cells and straps in the current test. Stored data can also be downloaded via the RS-232 connector directly to a personal computer or the BITE2P transmitter printer.

One additional feature of the receiver is that if you are called away while in the middle of the test, simply shut down the instrument and it will remember where you left off in the test.

The clamp-on current sensor is connected to the receiver during testing and clamped around a convenient intertier or intercell connection within the loop created by the transmitter's



current source leads and the battery string. If the intercell or intertier connection consists of more cables than the diameter of the clamp-on current sensor can encompass, the receiver has a split-strap function.

There are optional RopeCTsTM available for large buss work. With the optional bar-code wand, additional information such as location ID, user ID, ambient and pilot cell temperatures can be recorded and stored. There is space on the printout to enter specific gravity readings.

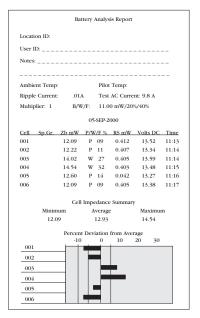


Figure 1. Sample battery analysis report

Transmitter

The transmitter provides the capacitively coupled ac test signal to avoid transients on the dc buss and applies it to the cells under test via the source leads. Both the BITE2 and BITE2P transmitters have an LCD and built-in receiver charger, while the BITE2P transmitter features a built-in printer.

Data, measured and stored in the receiver can be exported to a PC. It can also be printed to the BITE2P transmitter printer where it can be reviewed. Figure 1 shows a sample printout of a full battery analysis report.

APPLICATIONS

A battery's internal impedance increases with decreasing capacity due to various conditions such as age, ambient temperature, discharge history, etc. See Figure 2. Both the BITE2 and BITE2P measure impedance values and dc voltage for lead-acid and nickel-cadmium cells up to 7000 Ah capacity.

Impedance finds electrical path problems due to plate sulphation, post-seal corrosion, dry-out, and poor intracell and intercell connections. This information lets the operator determine maintenance needs such as:

- Cell replacement criteria based on impedance trends.
- Jumpering out a cell or two.
- Clean and/or retorque intercell connectors.
- Shorten the maintenance interval, etc.

Typical installations that can be tested using the BITE2 and BITE2P include:

- Electrical power generation plants.
- Substations: utility, railroad, industrial
- Telecommunications facilities: CO, Wireline, Wireless, MTSO
- UPS systems
- Railroad: Signals and Communications, substation
- Aircraft power supplies
- Marine, military

FEATURES AND BENEFITS

- On-line testing requiring no downtime.
- Enhanced printing and memory functions.
- Calculates impedance automatically and stores results for on-site review.
- Requires no battery discharge.
- Receiver can download stored data to PowerDB software for quick, easy analysis.
- Reduced test time: less than 3 seconds for each cell.
- Measures impedance and dc voltage values for all lead-acid and nickel-cadmium cells up to 7000 Ah.
- Stores more than 2000 sets of readings in up to 300 tests.
- Checks charger condition by measuring ac ripple current.
- PowerDB LITE allows data to be stored and allows custom reporting. (ideal for NERC & FERC requirements)

Test Procedure

The BITE2 and BITE2P work by applying a capacitively coupled ac test signal across the battery string while online. The receiver and potential probe are placed at the cell terminals to measure the signal and resulting voltage drop for each cell/jar. During each measurement, impedance is calculated following Ohm's Law, displayed on the LCD and stored. The instruments also measure, display and record dc voltage and interconnection (strap) resistance to help determine the overall condition of the entire battery string's electrical path from terminal plate to terminal plate. The also measure ac ripple current, a charger parameter.

The BITE2 and BITE2P receiver stores the readings in its internal memory. These measurements, along with other maintenance data such as ambient and pilot cell temperatures and ac ripple current, assist in determining the overall condition of battery systems. Figure 2 shows a typical test setup.

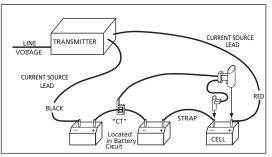


Figure 2. A typical test setup

Megger.

B Megger.	BATTERY TEST	Meg		Megger.	BATTERY TEST	Megger
ESTATION HAZELT	ON Position	TEST	и			PAGE
PT LOCATION	1	DAT	s5/5/2009	Aug. Strap Resistance 0.076		
SET 10	AMBENT TEMPERATURE 25 -0	HUMDITY JOB		STRAP # RESISTANCE IN VARIATION ME	TIME CONNECTED TO TYPE	
ST EQUIPMENT USED	BITE3 115	TED BY Darry	d Evans	3 0.077 10 4 0.973 42	08.48 3 Inter-cell 08.48 4 Harrow	
				\$ 0.001 0.3 0 0.000 40.0	05.45 5 Mini-cell 05.45 6 Mini-cell	
The strength of the	T VOLTE PER CELL HYDROMETER, START/SKP CELLS 1 / 1	NOMINAL 2 DUTY 0	ter	7 6.07 4.1	OL45 7 Intercel OL45 8 Intercel	
MOER OF CELLS 12 NUMBER	TOP GELLS / JAR 1 NUMBER OF STRAPS 1	-	to	9 0.054 33.4 10 0.337 903.9 11 0.08 50	08.50 9 Principal 08.50 10 Inter-cell 08.50 11 Inter-cell	
ARGER MANUFACTURER Exide		EQUALIZATION	VOLTAGE VOR	12 1.8 2.518.2	06.50 11 Inter-cell 06.51 12 Inter-cell	
MODEL		CURRENT Amps		MPEDANCE VARIATION GRAPH		
TOTAL AC CURRENT		OAT CURRENT		120.00		
HIGH VOLTAGE LIMIT (V) 15 VARIATIO	ON VENENING (%) 15.0 DEVIATION WARNING (%) 20 ITION ALARM (%) 30.0 DEVIATION ALARM (%) 40	0 HANGE WARNING (%) 50	STRAP WARNING (%): 10.0	110.00		
				90.00		
CRAM		-	-	82.00 76.00		
				60.60		
and the second se	And in case of the local division in which the local division in which the local division in which the local division in the local din the local division in the local division in the local din the l	Contraction of the		80.00	and the second	
		Constant L		40.00	and the second	
	6 - Quil	A DECEMBER OF		25,00		
				10.00		
To part 1						· • • • • • • • • • • • • • • • • • • •
and a second				10.00 0.00 -10.00 -20.00		
- Tent				10.00 0.00 -10.00 -20.00	· · · · · · · · · · · · · · · · · · ·	· · · · ·
- Contraction				10.00 0.00 -10.00 -20.00	• 1 ⁴ criture ⁷ 1	• • • • •
				1 2 3 2001	• ¹ ⁴ Cet hyster ⁷ •	1 9 1 Q
where impedance 3.1956	Ag inputers 18	Mr. Voltage 1.8 Mar.	Vutage: 2.02	1900 100 1000 1	• · · · · · · · · · ·	
white Insection. 3 1060	CELL DATA	Mr. Voltage 1.85 Mar	Votage 2.02 CELL DATA	1 2 3 2001	• • • • • • •	9. 9. 9. 9.
-	CELL DATA MPECIANCE (INIS-DAVIS) I'S DEVIATION IS WARATION I'S DAVINGE		Vutage: 2.02	900 -000 -000 -000 -000 -000 -000 -000	4 3 ^o cet water ³	
NOTES VALUE	CELL DATA VOLTAC MPEDANCE (mill-ohma) % CHANQE (solid-ohma) % CHANQE (solid-ohma) % CHANQE (solid-ohma) % DEVARTON (disastine) % WARATION (bits) % CHANQE (bits) % CHANQE (solid-ohma) 64.6 % DEV % Ohma) % CHANQE (solid-ohma)	THE MODEL	Votage: 2.02 CELL DATA	900 -1680 -1880 -1 2 3 BORTED MOREONICE VARIATION GRAPH 12000 -1980	Contractor of the second secon	
NOTES VALUE	OELL DATA MPECIANCE (mil-dens) % Ch.7AC % DEVATION % WIN-ATRON % DEVANCE (Baseline) (String) (Prev.) (Vit) 56.6 30.2 2.011 14.6 4.8 2.000	26 TIME MODEL 4	Votage: 2.02 CELL DATA CELL DATA CELL GRECHIC GREATY 2 2	900 -100 -100 -100 -100 -100 -100 -100 -	• 1 Server 1	9 9 9 9
NOTES VALUE 5011 3055 3259	OELL DATA MIFECRATCE (unit-dense) (strastress) Vol.1x6 Vol.1x6 (strastress) Vol.1x6 Vol.1x6 (strastress) MIEL Vol.1x6 (strastress) Vol.1x6 (strastress) Vol.1x6 (strastress) MIEL Vol.1x6 (strastress) Vol.1x6 (strastress) Vol.1x6 (strastress) MIEL Vol.1x6 (strastress) Vol.1x6 (strastress) Vol.1x6 (strastress) MIEL Vol.1x6 (strastress) Vol.1x6 (strastress) Vol.1x6 (strastress)	DE TAVE MODEL 4	Voltage: 2.02 CELL, DATA CELL, DATA CANATTY C 2 3 4 4	1 00 1 0 1 0 1 0 1 0 1 0 1 0 1 0	Continues of the second	
NOTES NOTES NOTES SOT	CELL DATA SMPECIACC(Inscience) (CLTAL) (dbm) (Dmg) (cdbm) (dbm) (Dmg) (cdbm) (dbm) (Dmg) (cdbm) (dbm) (Dmg) (cdbm) (dbm) (dbm) (dbm) (dbm) (dbm) <td>2E TME MODEL 4 08.48 0-354.13 06.48 09.48 06.49 06.49 08.49 08.49</td> <td>Velage: 2.02 CELL CATA CELL CAT</td> <td>1 2 3 3 1 2 3 3 DOTED AND CARACTER GRAVE 1 3 3 DOTED AND CARACTER GRAVE 1 3 3 DOTED AND CARACTER GRAVE 1 4 3 3 DOTED AND CARACTER GRAVE 1 5 3 3 DO</td> <td>* ³ ¹ort Note² ¹</td> <td></td>	2E TME MODEL 4 08.48 0-354.13 06.48 09.48 06.49 06.49 08.49 08.49	Velage: 2.02 CELL CATA CELL CAT	1 2 3 3 1 2 3 3 DOTED AND CARACTER GRAVE 1 3 3 DOTED AND CARACTER GRAVE 1 3 3 DOTED AND CARACTER GRAVE 1 4 3 3 DOTED AND CARACTER GRAVE 1 5 3 3 DO	* ³ ¹ ort Note ² ¹	
NOTES NOTES VIELUE STI STI STO ST	OFLI. GMTA OCT.0.0174 MPECIANCE (minic draw) CO.110.0109 CO.110.0109 Co.010.0109	2E THE MCCEL 4 CE48 6-35A11 CE48 6-35A11 CE48 6-35A11 CE48 6 CE48	Voltage 2-02 CELL DATA CELL DATA CELL SPECIFIC 2 3 4 5 5 5 5 5 5 5 5 5 5 5 5	1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	4 3 Get Note	
NOTES NOTES Script	CFLI. DATA MPCIDAGCI (millionithm) CLARAFOR (millionithm) CLARAFOR (millionithm) Clarafor 15 (CLARAFOR (millionithm)) Clarafor Clarafor Clarafor Clarafor 960 922 241 Clarafor Clarafor <td>DE THEE MCCEL 4 08:49 6.35611 0</td> <td>Vitrage 2-20 CELL CATA CELL Secure TEMP S </td> <td>100 100 100 100 100 100 100 100</td> <td></td> <td></td>	DE THEE MCCEL 4 08:49 6.35611 0	Vitrage 2-20 CELL CATA CELL Secure TEMP S	100 100 100 100 100 100 100 100		
NOTES VALUE NOTES VALUE Status Status VALUE Status VALUE Status VALUE Status VALUE VALUE Status VALUE VALUE VALUE VALUE VALUE VALUE	OLL GNA MPCDAMC_instantion) Vice 1/10 Standmini Vice 1/10 Bild and the stantistic stantistantisti stantistic stantistic stantistic stantistic stantistic s	PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359	Volger 230 CELL GATA CELL GATA			
NOTES VALUE 0 3591 0 3591 0 100 0 100 0 400 0 400 0 400 0 400 0 400 0 3590 1 3340	OLL GNA MPCDAMC_instantion) Vice 1/10 Standmini Vice 1/10 Bild and the stantistic stantistantisti stantistic stantistic stantistic stantistic stantistic s	DE TIME MCCEL I 08.45 6.35411 6.35411 6.35411 08.45 6.3641 6.3641 6.3641 08.45 6.3641 6.3641 6.3641 08.45 6.3642 6.3641 6.3641 08.45 0.649 6.3641 6.3641 08.45 0.649 6.3641 6.3641 08.45 0.3640 6.3641 6.3641 08.45 0.350 6.3641 6.3641	Voltage 2:00 CELL GATA CELL GATA CELL GATA CC CC CC CC CC CC CC			
NOTES VMUE 2 51 3 125 6 426 6 426 8 426 9 426 9 426 9 426 9 426 9 326 9 324 Alg (holp Resentany, 0 201)	OLL GNA MOTIONIC (minical) \USELTIONIC (minical) String (minical) \USELTIONIC (minical)	PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359	Volger 230 CELL GATA CELL GATA		* 5 'Get Wester" *	
NOTES VALUE 1 301 2 305 3 2220 4 220 5 400 6 400 7 400 9 200 10 200 <t< td=""><td>OLL GNA MOTIONIC (minical) \USELTIONIC (minical) String (minical) \USELTIONIC (minical)</td><td>PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359</td><td>Volger 230 CELL GATA CELL GATA</td><td></td><td></td><td></td></t<>	OLL GNA MOTIONIC (minical) \USELTIONIC (minical) String (minical) \USELTIONIC (minical)	PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359	Volger 230 CELL GATA CELL GATA			
NOTES VALUE 0 359 0 359 0 359 0 350 0 350 0 350 0 350 0 350 0 350 0 350 1 350 1 1500 1 1500 1 1500 1 1500	OBLA DATA MOTOLANCE INSURATION SURVATIONAL (CHARANDARIA) CONTACTARIA (CHARANDARIA) Statustication (Charandaria) Contaction (Charandaria) Statustication (Charadaria)	PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359	Volger 230 CELL GATA CELL GATA			
NOTES VALUE 1 100 2 2000	OLL GNA METDANCE (minishim) \CQL 10, MILATION \S, LUMARISH \S, CLIMAGE Scherhmill (minishim) (climation) 016 0.01 016 0.01 016 0.01 016 0.01 017 0.01 018 0.01 019 0.01	PE TANE MODEL 4 10:49 0:3541 0:3541 0:3541 10:44 0:354 0:354 0:355 0:48 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359 0:359	Volger 230 CELL GATA CELL GATA			
NOTES VALUE 1 301 2 305 3 2220 4 220 5 400 6 400 7 400 9 200 10 200 <t< td=""><td>OBLA DATA MOTOLANCE INSURATION SURVATIONAL (CHARANDARIA) CONTACTARIA (CHARANDARIA) Statustication (Charandaria) Contaction (Charandaria) Statustication (Charadaria)</td><td>Of THME MODEL 4 GR143 </td><td>Volger 232 CELL GATA CELL GATA</td><td></td><td></td><td></td></t<>	OBLA DATA MOTOLANCE INSURATION SURVATIONAL (CHARANDARIA) CONTACTARIA (CHARANDARIA) Statustication (Charandaria) Contaction (Charandaria) Statustication (Charadaria)	Of THME MODEL 4 GR143	Volger 232 CELL GATA CELL GATA			

Figure 3. Power DB reporting

Interpretation of Readings

Data produced by the BITE2 and BITE2P can be interpreted in several modes: instantaneous, short-term and long-term time frames. PowerDB makes data analysis fast & easy. See figure 3.

Instantaneous Interpretation

The operator can enter a baseline value from either the impedance measurements obtained at commissioning. The percent changes from baseline for warning and fail levels are entered, but 20 percent and 40 percent are the default settings. The LCD on the receiver will display the status of the cell for a few seconds before proceeding to the next cell. The status of each cell/jar will be printed on the Battery Analysis Report.

Short-Term Interpretation

Impedance readings for individual cells can be used in the short term to compare with the average impedance readings for the entire battery string. Individual cell values with deviations of more than $\pm 15\%$ for flooded lead-acid, $\pm 35\%$ for VRLA, and 50% for NiCd cells from the battery string average typically indicate a problem with that cell. Megger recommends additional investigation of such cells including a verification of intercell connections and a single cell load-cycle test.

Long-Term Interpretation

Impedance readings for the entire battery can be used in the long term to determine replacement criteria. Battery cell impedance values should be recorded and compared to previous readings to determine the position of the cell on the curve of impedance versus cell life as shown in Figure 4. Based on experience, a variation of $\pm 20\%$ from baseline for flooded leadacid, $\pm 40\%$ for VRLA and 50% for NiCd cells indicate significant change in the electrical path to warrant serious evaluation of the condition of the battery system. Megger maintains a database of impedance values by some manufacturers and battery size/type. For comparison purposes, this information is available upon request.

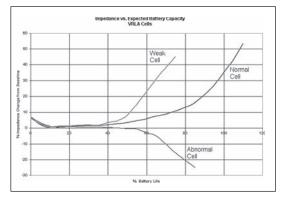


Figure 4. Impedance increases with battery age (and weakness)

Meader

SPECIFICATIONS

Application

The BITE2 and BITE2P test lead-acid and nickel-cadmium cells up to 7000 Ah.

Maximum Total Voltage at Current Source Leads 275 V dc (larger battery systems can be sectioned to accommodate this specification)

Transmitter

Supply Voltage 100 to 130 V, 50/60 Hz, 200 VA max 210 to 250 V, 50/60 Hz, 200 VA max

Source Output Current 10 A nominal, 50/60 Hz operation

Maximum Battery String Test Voltage

275 V dc at source lead terminals (section the battery if >275 Vdc) Display

Digital LCD meter, 0 to 15 A

BITE2P Printer Built-in thermal, with 4.25 in. (110 mm) printing width

Charger

Supply Voltage 100 to 130 V, 50/60 Hz, 14 VA 210 to 250 V, 50/60 Hz, 14 VA

Output 6.50 V dc @ 1.10 A dc charging (max) 9.60 V dc open circuit

Receiver

Accuracy ac impedance 5% +1 LSD dc voltage $\pm(0.5\% \text{ of rdg} + 1 \text{ LSD})$

Precision Better than 0.5% one sigma

Voltage Range and Resolution

1 to 2.500 V dc, 1 mV resolution 2.5 to 25.00 V dc, 10 mV resolution

Impedance Range and Resolution

0 to 1.000 m Ω , 1µ Ω resolution 1 to 10.00 m Ω , 10µ Ω resolution 10 to 100.0 m Ω , 0.1m Ω resolution

Settling Time per Reading

3 seconds maximum

Display LCD, 2 x 16 characters

Supply

4.8 V dc, 800 mAh, quick charge NiMH battery pack

Battery Pack Life, Full Charge 5 hours continuous

Maximum Cell/Jar Test Voltage 25 V dc between receiver and potential probe

Temperature

Operating: 32 to 105° F (0 to 40° C) Storage: -5 to 130° F (-20 to 55° C) Humidity: 20 to 90% RH, noncondensing

Clamp Range

Standard CT 2.0 in. (50 mm) maximum opening

Optional Miniature CT

0.5 in. (12 mm) maximum opening

Optional RopeCT[™] 12 in. (300 mm) opening, approx.

Standards

Conforms to the EMC Directive 2004/108/EC and the LVD Directive 2006/95/EC

Dimensions

Transmitter

BITE2: 6.5 H x 14 W x 10.6 D in. (16.5 H x 35.6 W x 27 D cm) BITE2P: 7.5 H x 18.5 W x 14.6 D in. (19 H x 47 W x 37 D cm)

Receiver (irregular shape) 7.25 H x 11.25 W x 2 D in. (18 H x 29 W x 5 D cm)

Weight

Transmitter BITE2: 17 lb (7.7 kg) BITE2P: 18 lb (8.2 kg) alone, 32 lb (14.5 kg) packed

Receiver 1.6 lb (0.7 kg)

ORDERING INFORMATION

ltem (Qty)	Cat. No.
BITE2, 110/230 V ac, 50/60 Hz, CE-Marked	246002B
BITE2P, 110/230 V ac, 50/60 Hz, CE-Marked	246004
Included Accessories	
Transmitter for BITE2	P30044-300
Transmitter for BITE2P	P30044-100
Receiver	P30620-3
Source Leads, 20 ft (6 m), fused	29386-2
Current sensor, 2 in. (50 mm) opening	
with 5 ft (1.5 m) lead	2002-786
CT extension cable, 20 ft (6 m)	33864-2
Communication cable, 6 ft (1.8 m)	35340
Charger cable	35341
Thermal paper	26999
ac line cord, 8 ft (2.5 m)	17032-7
ac line cord, 8 ft (2.5 m)	17032-7

ltem (Qty)	Cat. No.
Manual for BITE2 and BITE2P	AVTM246004
Accessory bag for BITE2	29996
Optional Accessories	
Current sensor 0.5 in. (12 mm) opening	
with 2.5 ft (0.8 m) lead	246034
CT extension cable, 20 ft (6 m)	33864-2
Current source leads, 10 ft (3 m), fused	246147
Current source leads, 30 ft (9.1 m), fused	246347
Current source leads, 40 ft (12.2 m), fused	246447
Bar code wand with preprinted code sheet	246201
Transit case for BITE2	35491